


QUICK REFERENCE SHEET


Raised Panel Designs

Square Raised Panel

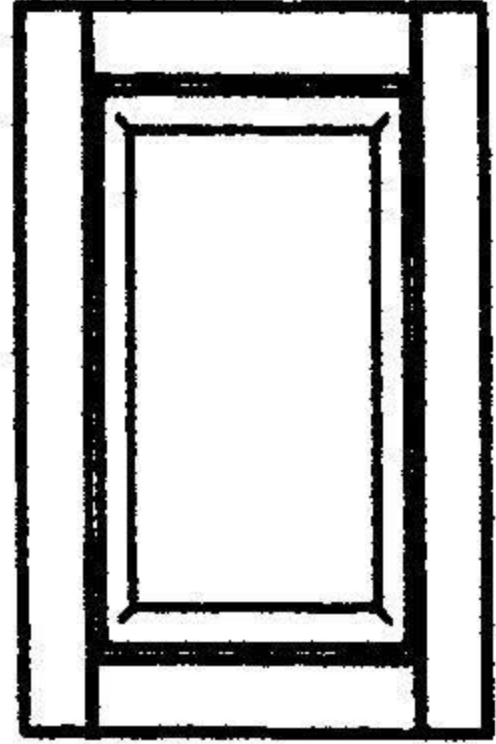


Square


Designer Panel

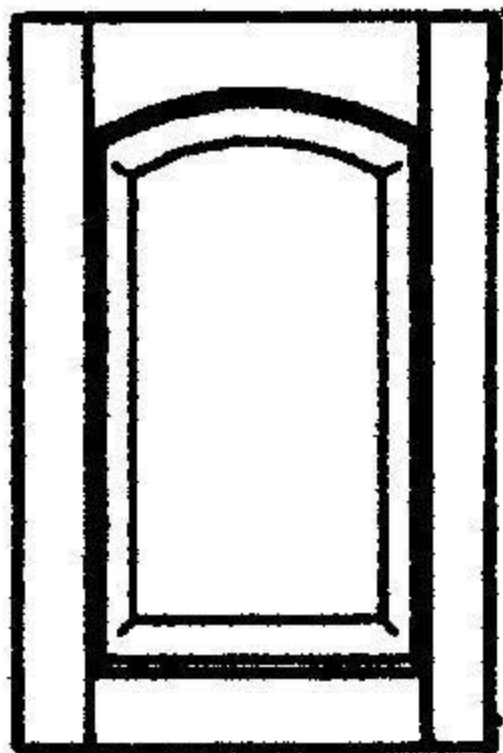


Arch

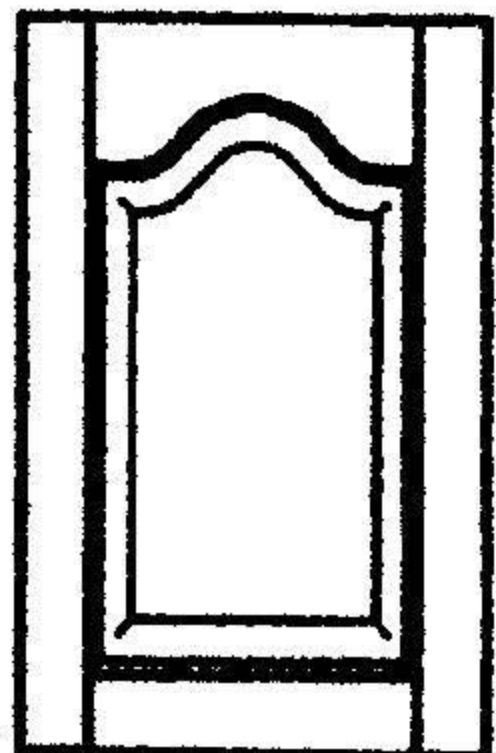


Cathedral

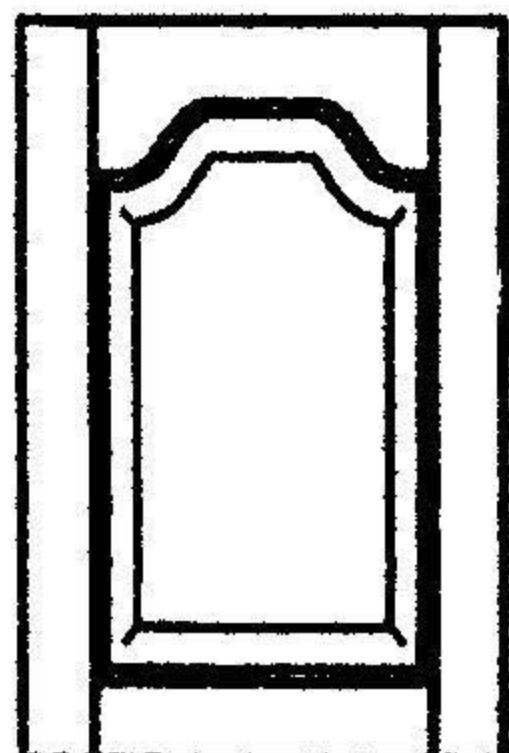


Provencial

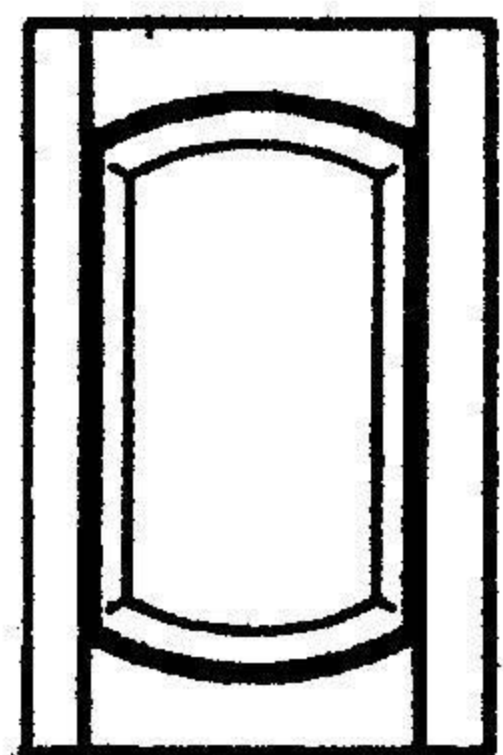

Double Arch

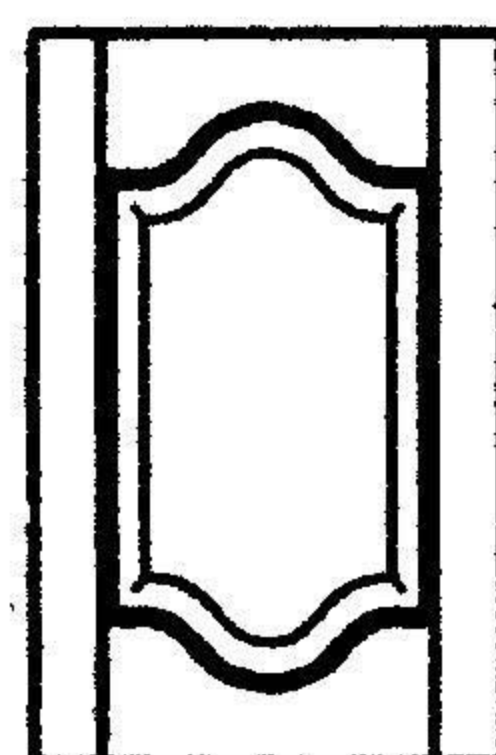

Double Cathedral

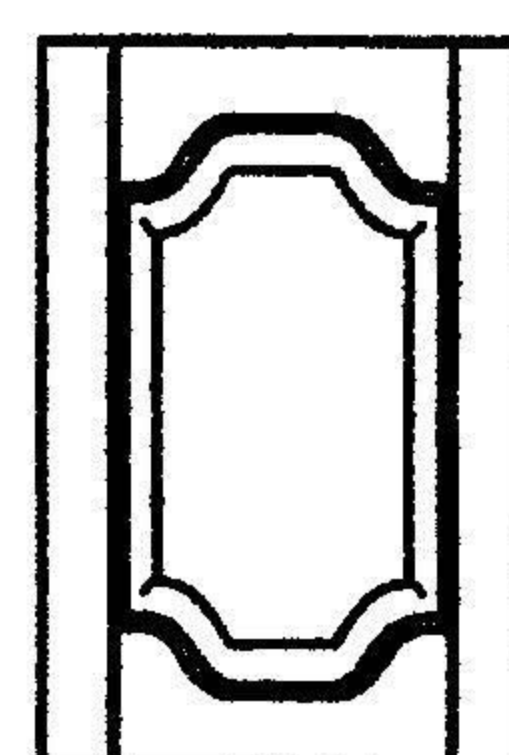


Double Provencial

Panel Profiles



Flat Panel with 1/2" Backcut


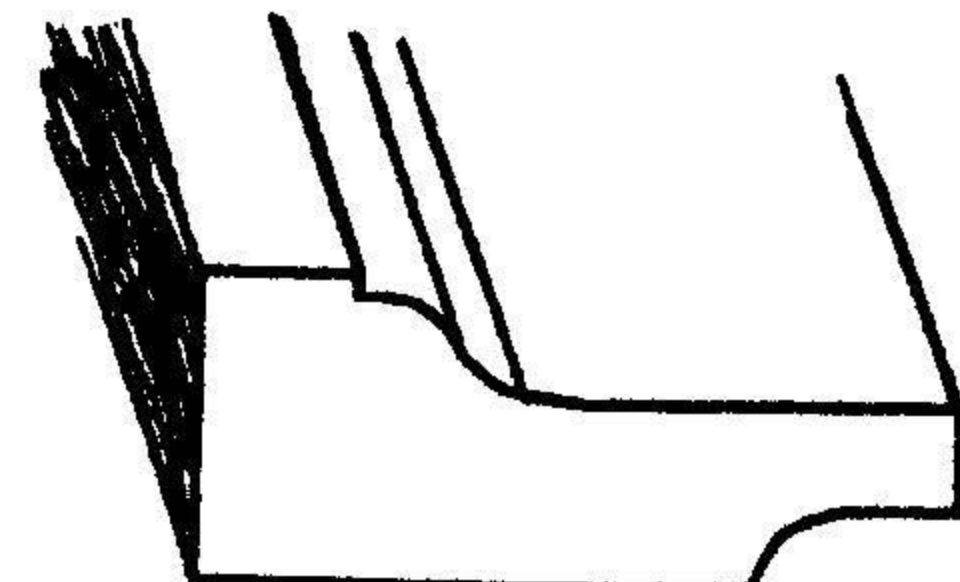


Parkwood Panel with 1/2" Backcut




Ogee Panel with 1/2" Backcut


Back of Door Detail
1/2" Backcut Design

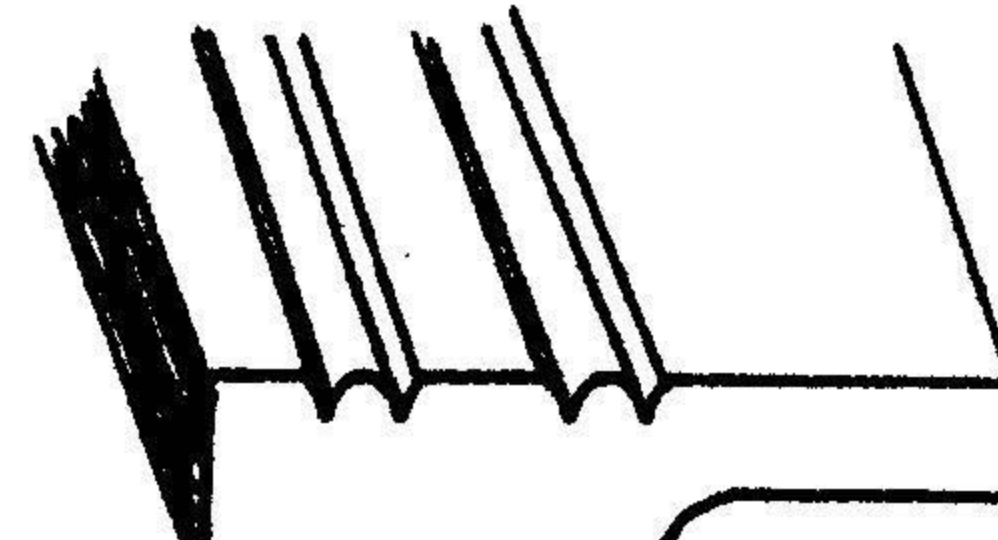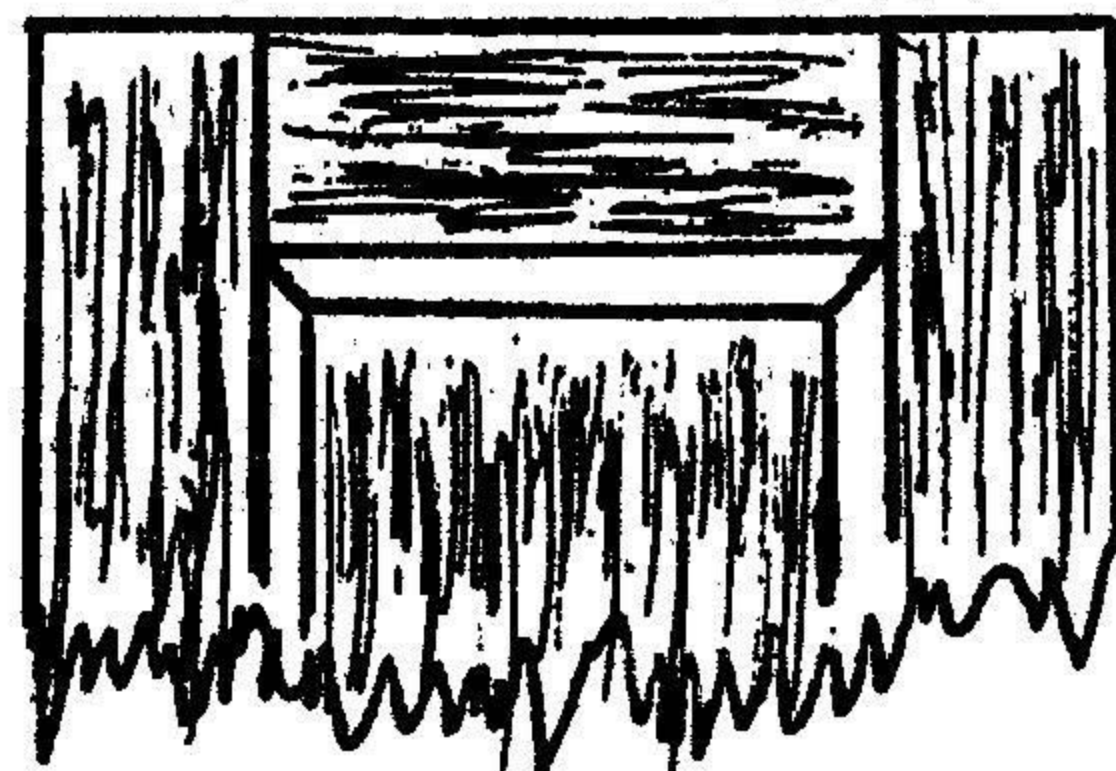

Beaded Panel with 1/2" Backcut

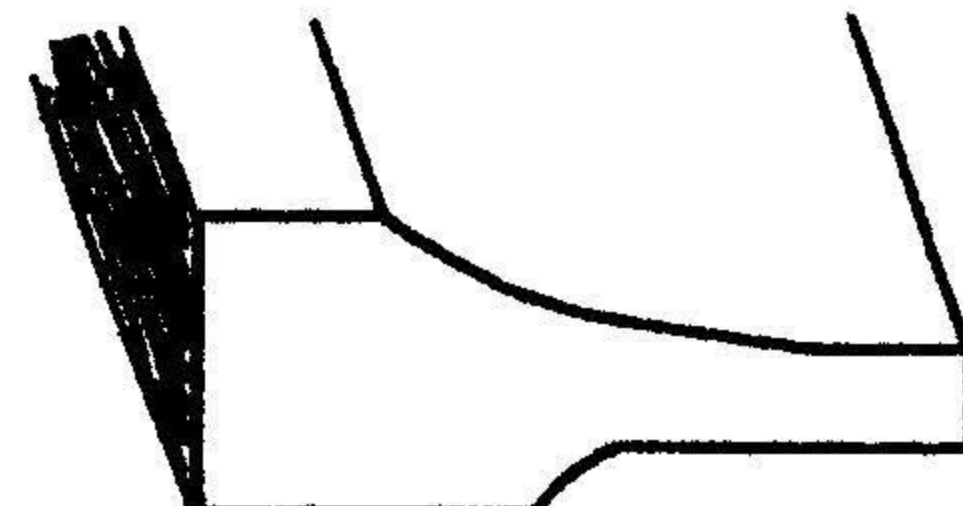


Cove Panel with 1/2" Backcut

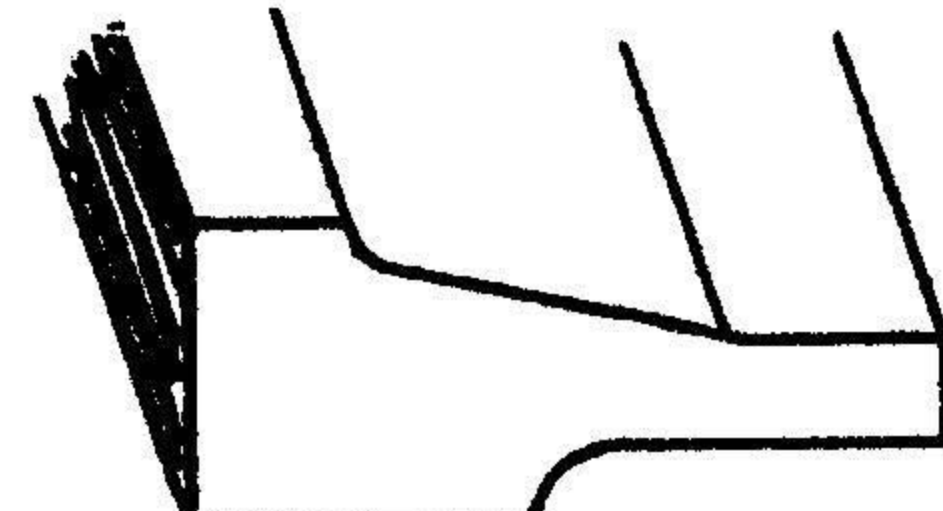

Bevel Panel with 1/2" Backcut



1/4" Panel Insert

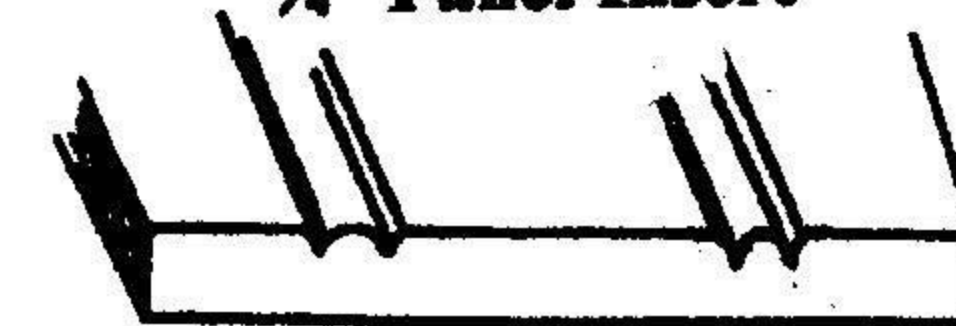

1/4" Beaded Insert

Standard Edge Treatments




3/8" Cove




3/8" Roundover w/ 1/16" Reveal



Square Eased Edge

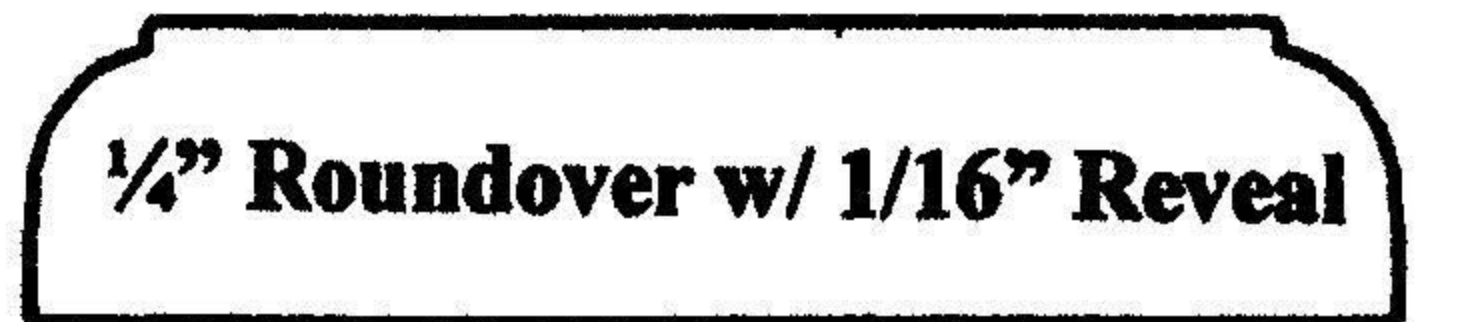


1/4" Roundover w/ 1/16" Reveal

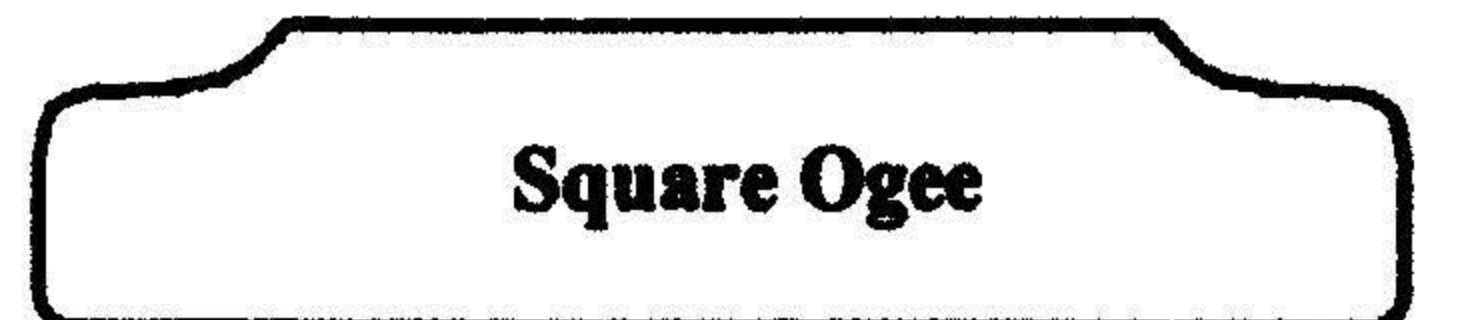

Square Ogee




3/8" Roundover

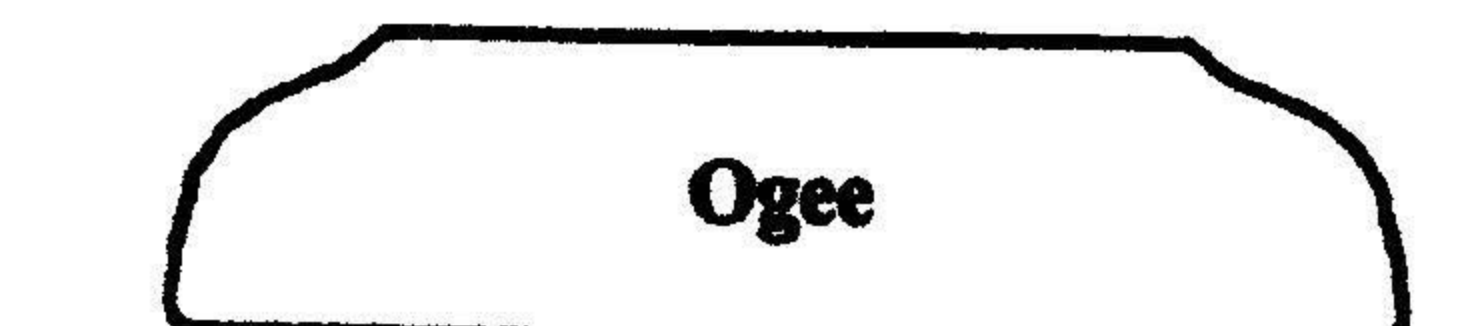

Ogee



Patton

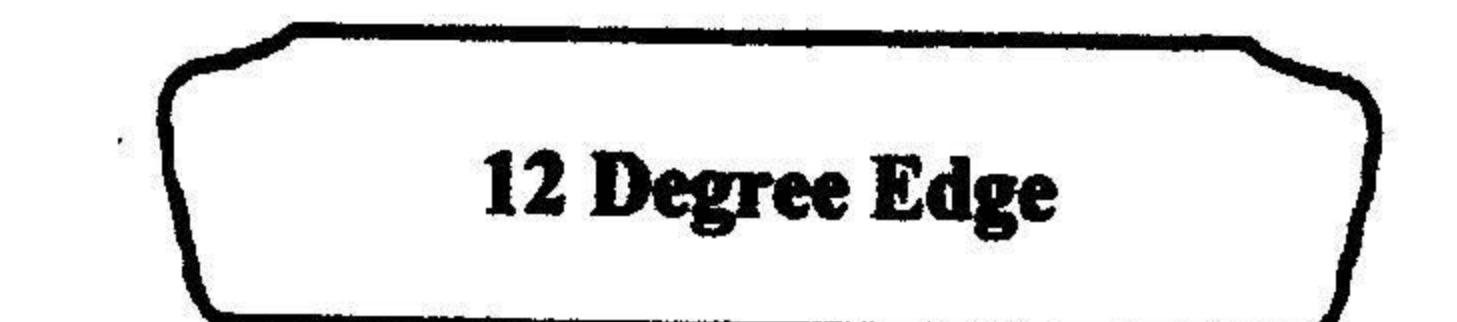

12 Degree Edge